

SUPPORT INFORMATION

Technical Support

Intrusion
2016-12-16

VANDERBILT



SPC Eventys IPC integration

This document describes the basic configuration steps, how to configure the Eventys NVR and connected IP cameras to make them available for the camera integration into the SPC system.


Key topics:

- Eventys NVR configuration
- Eventys IP camera settings
- SPC configuration
- Test options

Table of content

1. SYSTEM OVERVIEW	3
2. EVENTYS NVR SETUP	3
2.1. Basic Configuration for Eventys NVR	3
3. EVENTYS IP CAMERA SETUP.....	4
3.1. Basic Configuration for Eventys Camera streaming.....	4
3.2. Test options.....	5
4. SPC PANEL SETUP	5
4.1. SPC Configuration for Eventys IP Cameras	5
5. WARRANTY	6

1. System overview

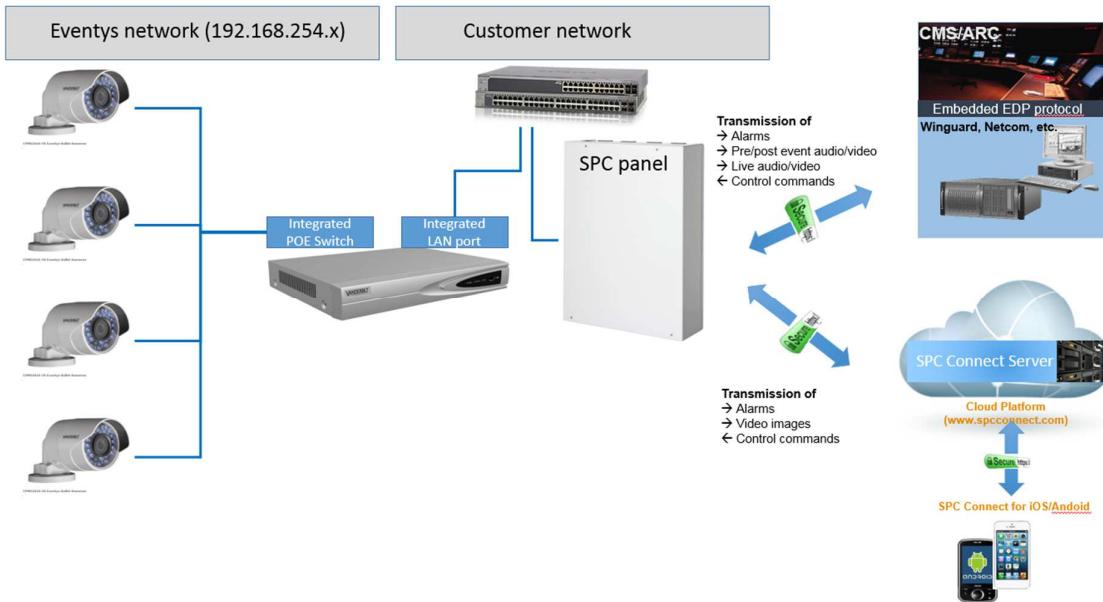

2. Eventys NVR Setup

2.1. Basic Configuration for Eventys NVR

Login to webpage of the Recorder with the admin user account
Go to “Configuration” / “Network” / “Advanced Settings” / “Other”
Activate the pass-through of video signals: “Enable Virtual Host”

The screenshot shows the 'Configuration' tab selected in the top navigation bar. The left sidebar has 'Advanced Settings' highlighted with a red box. In the main content area, there is a checkbox labeled 'Enable Virtual Host' which is checked. Other options like 'Enable Flow Control' are present but unchecked. A 'Save' button is at the bottom right.

Go to “Configuration” / “System” / Camera Management
Click on the IP-address in the Column “Connect” to be forwarded directly to the webpage of the IP camera

The screenshot shows the 'IP Camera' management page. The left sidebar has 'Camera Management' highlighted with a red box. The main table lists four cameras (D01, D02, D03, D04) with their respective Channel No., IP Address, Management Port, Security status, and Protocol. The 'Connect' column contains hyperlinks to the camera's web pages, with the first one (http://19...) highlighted with a red box.

Channel No.	IP Address	Management Port	Security	Status	Protocol	Connect
D01	192.168.254.2	1	N/A	Online	Vanderbilt	http://19...
D02	192.168.254.3	1	N/A	Online	Vanderbilt	http://19...
D03	192.168.254.4	1	N/A	Online	Vanderbilt	http://19...
D04	192.168.254.5	1	N/A	Online	Vanderbilt	http://19...


3. Eventys IP Camera Setup

3.1. Basic Configuration for Eventys Camera streaming

Mandatory stream settings:

- Resolution: min. 320x240 - max. 640x480
- Bitrate: Variable
- Video Quality: Medium
- Frame rate: 25 fps
- Max. Bitrate: 512 Kbps
- Streaming codec: MJPEG / JPEG
- IP address: set to a free IP address in the same IP range of the Eventys NVR

- Open the web browser, enter the IP-address from the camera and log in.
(Standard login: “admin” and password: “admin”)

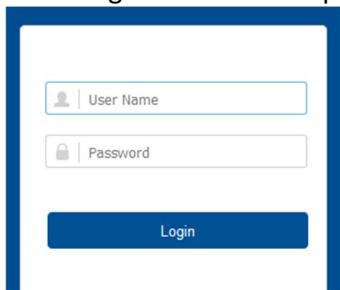

Remark: Make sure that the IP-address of the camera is in the same IP network range as the Eventys NVR.

- To configure the image compression from the defined stream, select “Configuration” / “Video/Audio” / select the Stream type “Sub Stream”, change the “Resolution to “320x240 or 640x480”, the Video Encoding to “MJPEG”.

Setting	Value
Stream Type	Sub Stream
Resolution	320*240
Video Encoding	MJPEG

3.2. Test options

To verify if the camera is supported from the SPC panel, open the web browser and enter the following string into the web browser address field:

`http://<IP-address>/ISAPI/Streaming/Channels/2/picture`

Remark: Please use the IP-address of the Eventys NVR for testing.

If no picture is shown, please check out the section 3.1 in this manual.

4. SPC Panel Setup

4.1. SPC Configuration for Eventys IP Cameras

Required SPC settings to support Eventys IP cameras:


- Camera type: Generic
- Network: IP address of the Eventys NVR
- Streaming port: 6500X (X: placeholder for the camera number)
- Username: the username of the recorder/camera
- Password: the password of the recorder/camera
- Authentication: activated
- Command string: /ISAPI/Streaming/Channels/2/picture

To configure these settings in SPC panel, please follow the instructions. (see below)

- Open the SPC webpage / enable Full Engineer mode / select “Configuration” / “Advanced” / “Verification” / “Video” / and add a new camera and enter the camera details (type, IP, port, authorization, etc.).

To adjust the above command string to your own Eventys camera:

- Enter the camera username and password in the corresponding fields
- Active the Authorisation
- Update the string with the “Update Cmd. String” button
- Copy afterwards the command string into the Command string field.
- Save the new configuration.

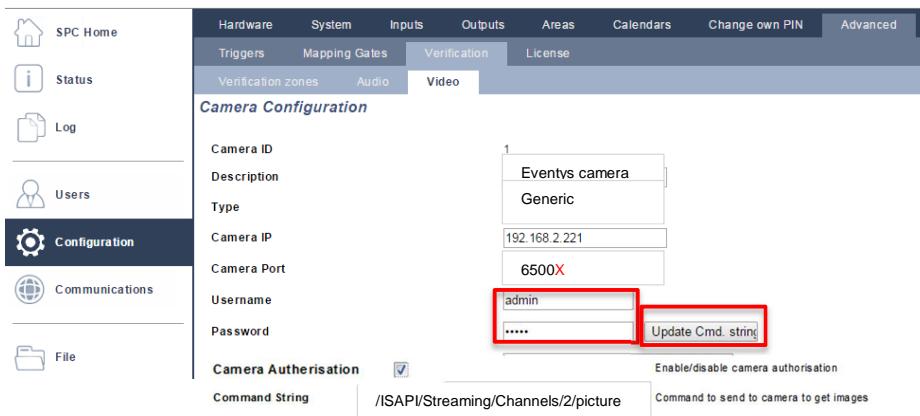

VANDERBILT

5. Warranty

The mentioned examples are the recommended settings. There are other configuration scenarios available, e.g. dual streaming required. For such scenarios, please consider possible limitations given from the different IP cameras.

If you have further experience with other IP cameras or supplementary information, please feel free to contact our Technical Support department.

If you have any questions, please contact our Technical Competence Centre.
Contact details can be found on our website:

www.vanderbiltindustries.com